36W DIN RAIL SWITCH MODE POWER SUPPLY

DRS-3600 SERIES

USER'S MANUAL

INTRODUCTION

This range of compact DIN mounted switching mode power supplies are designed for a wide range of control equipment which demands good quality regulated DC power source with excellent EMC immunity and electrical performance in an industrial environment.

FEATURES


- Overload Protection: The constant current circuitry is adopted to prevent from overload. The DC output ON indicator will turn off when the unit is 1. overloaded
- Over Temperature Protection: The over temperature circuitry is functioned when the unit is over a certain high temperature to prevent the unit from 2 damage by the high temperature. When the circuitry is functioned, the output voltage and current will drop down and the DC output ON indicator will turn off.

De-rating Curve

for DRS-3600-05 / DRS-3600-12

- 3. Over Voltage Protection: The over voltage circuitry protect the unit and the loading equipment from damage by abnormal high output voltage.
- High RFI Stability: The high protection circuitry against RFI (Radio Frequency Interference) provides a stable operation. 4
- 5. The concealed trimmer (Fine tune access port) allows fine tuning of output voltage.
- Up to 5 units can be connected in parallel. 6.

PANEL DESCRIPTION

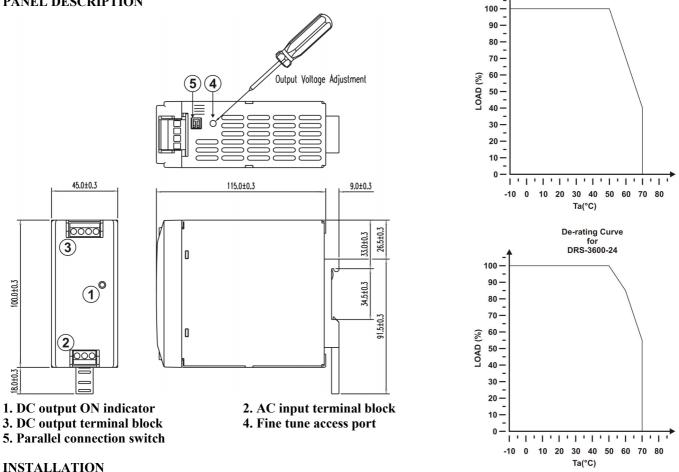

INSTALLATION

- The DRS-3600 series power supplies are build-in units and designed for mounting on a standard DIN- rail TS35 (35x15/7.5). 1.
- 2 Make sure the correct mounting position for optimal cooling performance.
- To fix the unit on the DIN rail, hook top part of clip on DIN rail, push down and inwards until you hear a clipping sound. 3.
- To remove the unit, insert a insulated flat head screwdriver into the recess in the clip closest to bottom of the unit and then push down to remove it from 4. the recess and lift it off from DIN rail. Note: For Indoor Use Only

SAFETY PRECAUTIONS

- NEVER remove the metal cover of the power supply while AC power is connected. 1
- NEVER touch the unit when your hands are wet. 2
- 3. NEVER operate the unit if foreign materials such as metallic objects, water, or other debris have fallen inside. Contact your dealer for check and repair.
- 4. NEVER operate the unit that was being damaged, as the voltage regulation circuitry may have been disabled. The resulting high voltage could damage your equipment.

- 5. **NEVER** allow foreign objects to touch the DC Power Output Terminals.
- 6. If you have the need to inspect the interior of the unit, let it to cool down completely, as some components may be enough to burn your hand in the event of component failure.
- 7. **NEVER** block the air intake window.

CONNECTION AND OPERATION

- 1. A protective device (fuse, MCB) and an easy accessible isolating device for disconnecting the power supply must be provided.
- Ensure that the main switch is switched off and prevented from being switched on again. In case of non-observance touching at any alive components or improper dealing with this power supply can result in death or severe injury.
- 3. Connect the equipment to the unit. If flexible wires are used, the wires have to be terminated. (e.g. by using ferrules)
- 4. To parallel the units to get higher output current, switch ON the parallel connection switch before wire connection.

SPECIFICATIONS

	DRS-3600-05	DRS-3600-12	DRS-3600-24
Voltage Range (Auto Select)		90 - 264Vac	
Frequency	47-63Hz~		
Full Load AC Current	0.85A@100Vac ; 0.5A@230Vac	0.8A@100Vac ; 0.45A@230Vac	0.8A@100Vac ; 0.45A@230Vac
No Load AC Current	40mA@100Vac;50mA@230Vac		
Inrush Current, cold start @25°C*	25A@100Vac;50A@230Vac		
Leakage Current	2mA		
Efficiency	75%	81%	83%
OUTPUT			
Normal DC Voltage	5V	12V	24V
Voltage Adjust Range	4.2 - 6V	10.5 - 14V	21.5 - 28V
Rated Current	7.2A	3A	1.5A
Rated Power	36W		
Ripple & Noise (peak to peak)**	≤50mV		
Line Regulation	≤0.2%		
Load Regulation (10% - 100%)	≤0.8%	≤0.3%	≤0.3%
Hold-up Time (Full Load)	>20mSec@100Vac;>120mSec@230Vac		
Parallel Operation	5 units max. user selectable		
PROTECTION			
Over load / Over Current	7.4-8.5A, C.C., Auto Restart	3.2-4.0A, C.C., Auto Restart	1.6-2.2A, C.C., Auto Restart
Over Output Voltage	6.5 - 10Vdc	15 - 20Vdc	30 - 35Vdc
SAFETY & EMC		•	•
Safety Standards	EN60950, UL508		
Withstand Voltage	I/P - O/P 3KVac ; I/P - F/G 1.5KVac ; O/P - F/G 0.5KVac		
Insulation Resistance	I/P - O/P, I/P - F/G, O/P - F/G 100Mohm and 500Vdc		
EMI Radiation & Conduction	Compliance to EN55011, EN55022 Class B, FCC part 15 level B		
Harmonics Current	Compliance to EN61000-3-2, 3 Class A & D		
EMC Immunity	Compliance to EN61000-4-2, 3, 4, 5, 6, 8, 11 ENV50204, EN55024, EN61000-6-2(EN50082-2) heavy Ind. level criteria A		
ENVIRONMENT	·	· · · · · · · · · · · · · · · · · · ·	2
Working Temperature	EN60950 : -10°C to +50°C (UL508 : 0 to 40°C)		
Derating above 50°C	See Derating Curve		
Working Humidity	20 - 90 RH non-condensing		
Storage Temperature Humidity	-10°C to +80°C, 20 - 90 RH non-condensing		
GENERAL			
Switching Frequency @ Full Load	60 - 80KHz		
Case Material	Electro-Galvanized steel & Aluminum Enclosure and Poly-carbonate Front Panel		
Safety Class	Degree of Protection 1 (IEC 5360)		
Case Protection	IP 20 (IEC 529)		
Mounting	Snap on type with self locking can be installed on 35 mm Din-Rails / 7.5 or 15		
Connection	Screw terminals with double terminals for output		
REMARK	*Ta=25°C Cold start **100MHz Band width scope		

All values are based on the Standard ambient Temperature 25°C and Pressure 0.1Mpa.